

ALTERNATIVE METHOD STEP UNIT




Good for taller units

1: Rip 3/4" ply to a width of 12" along the length of the ply (with the grain)

2: Layout the Stringers as illustrated on the right

3: Assemble unit

Glue and Fasten (Screws, Staples, Nails) Nailers to Risers

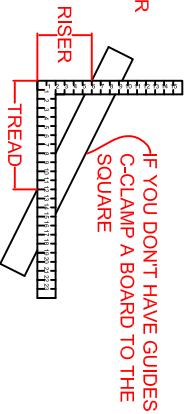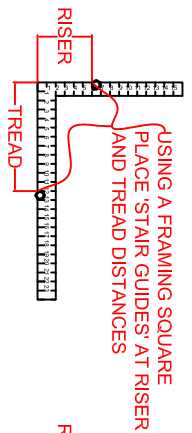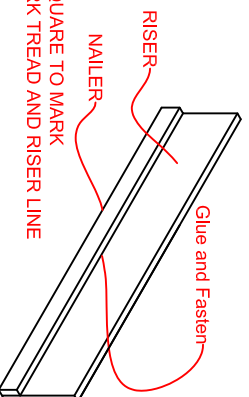

MAKE A MARK 3" IN FROM THE END OF THE BOARD

SLIDE SQUARE TO MARK AND MARK TREAD AND RISER LINE


SLIDE SQUARE TO TOP OF RISER LINE AND MARK THE NEXT RISER AND TREAD

USE SQUARE TO ESTABLISH LINE FOR BASE OF STRINGER

REPEAT UNTIL NUMBER OF DESIRED STEPS HAS BEEN REACHED

REMOVE GUIDES FROM SQUARE AND USE SQUARE TO ESTABLISH BACK LINE OF STRINGER

MAKE A MARK AT 5 1/4" AND USE SQUARE TO ESTABLISH BOTTOM OF STRINGER

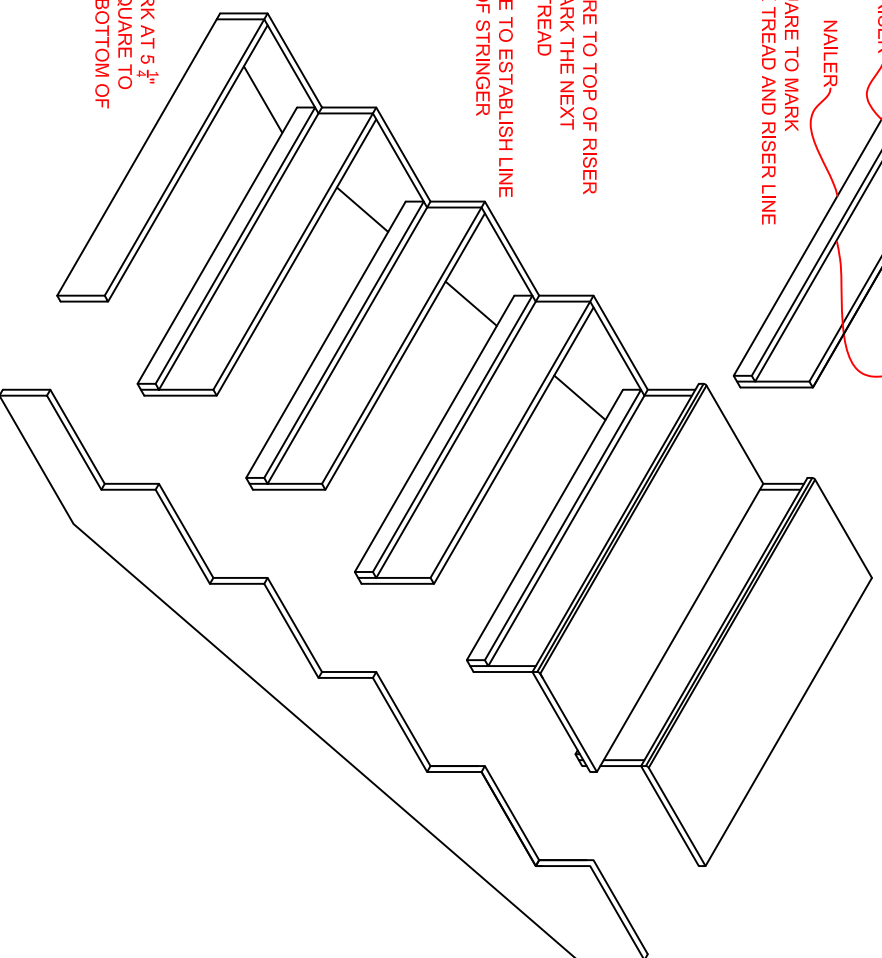

4: Glue and Fasten (Screws, Staples, Nails) Risers to Stringers.

5: Glue and Fasten (Screws, Staples, Nails) Treads to Risers