STEP UNIT

Stringers, Risers, Treads, and Stretcher

1: Make dots along the vertical and horizontal edges of a sheet of ¾ ply.
2: Using a straight edge connect the dots with lines.
3: With a Sharpie darken the lines that show the outline of stringer(s).
4: Drill 3/8" holes at the intersection points.
5: Using Jig/Sabor Saw cut along 'sharpie' lines.
6: Using Table Saw cut Risers, Treads, Nailers, and Stretchers

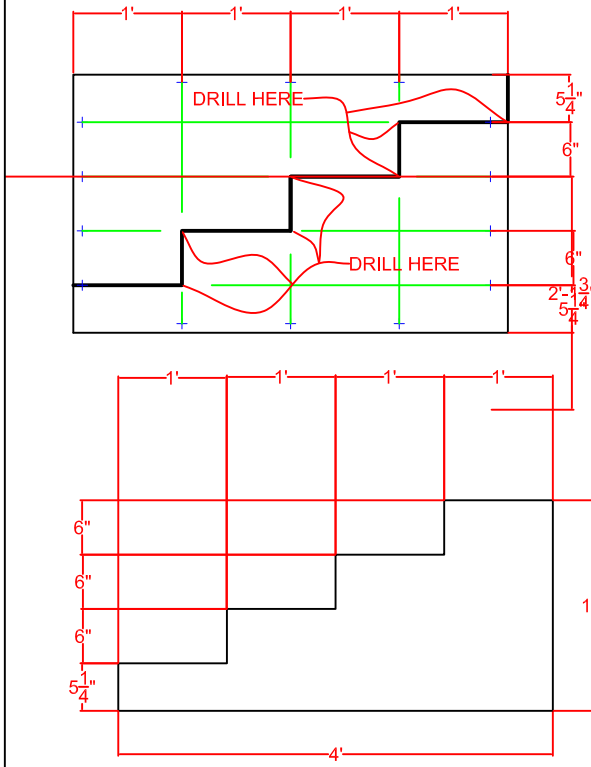

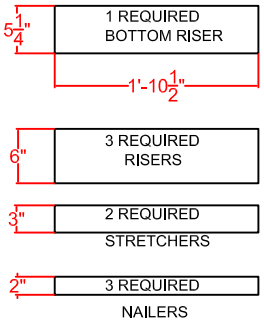

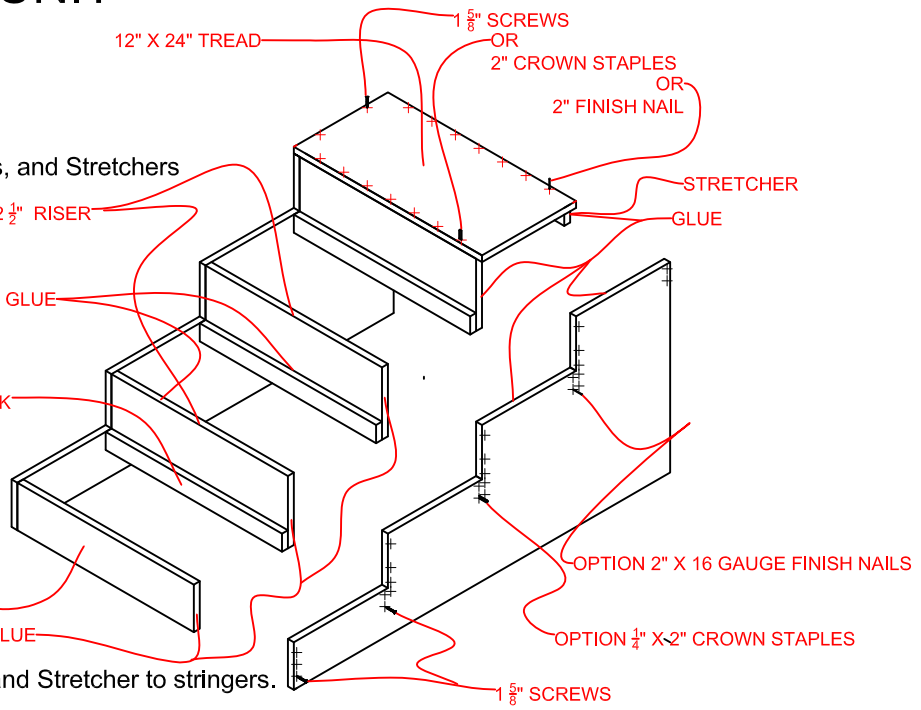

Assembly Step 2

2: Attach 5 1/4" (Bottom) Riser, Top riser, and Stretcher to stringers.

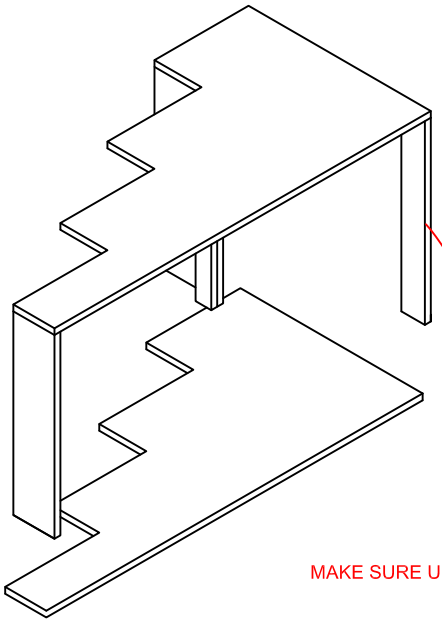

Assembly Step 3

3: Glue and fasten (screws, nails, staples) Treads to Risers, Stringers, and Nailers

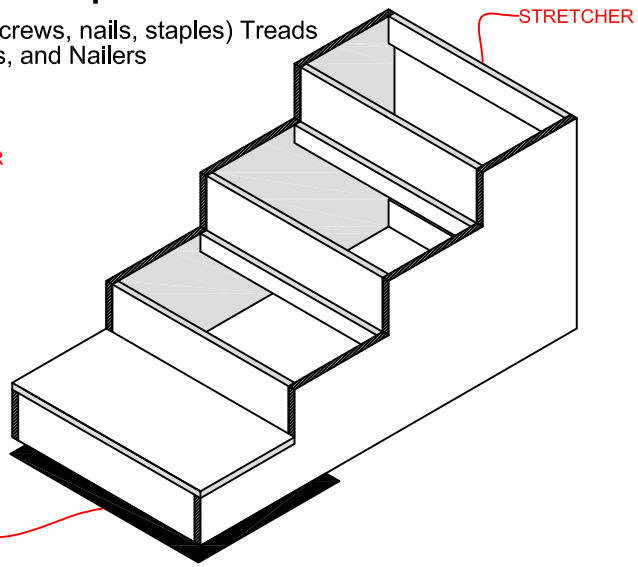

Assembly Step 1

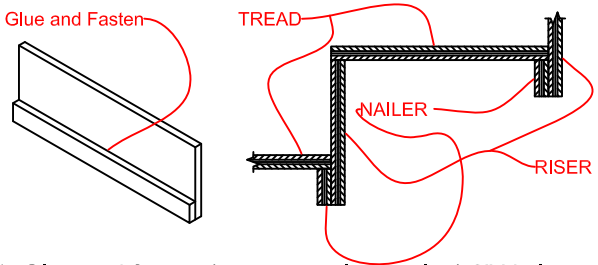

1: Glue and fasten (screws, nails, staples) 2" Nailing Blocks to lower edge of 6" Risers